

## 10.Scan mode



Trigger Scan



Continuous Scan



Auto Sense Mode

## 11.Terminator Suffix



Add suffix



No Terminator suffix



Set Terminator Suffix to 0x0D 0x0A(CR+LF)



 
Set Terminator Suffix to 0x0D(CR)

## 12、 Troubleshooting

Serial number	problems	Possible reason	Solution
1	Interface cable is installed correctly, but scanner not started.	No power to scanner	Ensure the scanner is Powered On
		Incorrect connection of interface cable.	Ensure all cable connections are secure
2	Interface cable connected but Scanner not decoding bar code	The Bar code type is disabled.	Enable that bar code type
		Damaged barcode	Scan a test bar code of the same bar code type
		Distance between scanner and bar code is incorrect	Move scanner closer to or further from bar code
		The scanner is not high enough to cover the barcode completely	Point the reader at the target and pull the trigger to enable the illuminator (red beam) to decode the bar code label.
3	Scanned data incorrectly displayed on host	Input method error	Convert input method to standard English input method
		Other settings were made for the scanner	Restore the parameters of the scanner to the factory settings state, or contact the vendor service center
4	Scanned data incorrectly displayed on host	Region improperly configured	Select appropriate country and language encoding scheme
5	Other faults	Device conversion error	Turn off the device power, connect the device and the scanner correctly. Restore the parameters of the scanner to the factory settings state, rescan the code




## Quick Start Guide

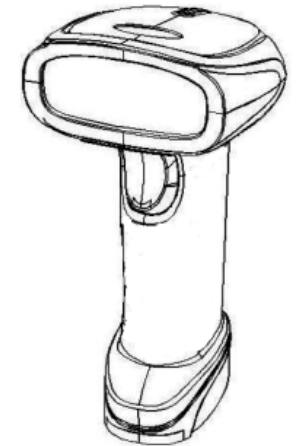


Dear users, thank you for choosing our products. we will provide you with quality products and caring services.

## 1.How to use

 Maintain a 10-40° bevel angle in the horizontal direction of the scanner and bar code for optimal scanning results.

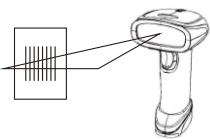


Aiming - Correct

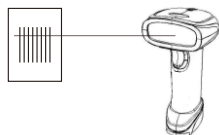 


Aiming - Wrong

## 2.Scanner Features

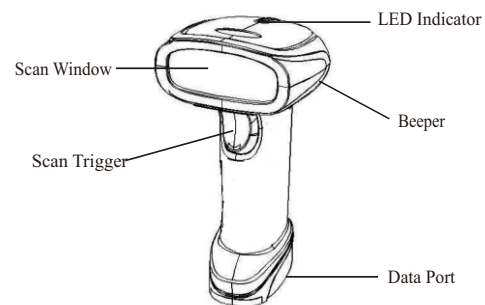 

## 3.Interface cable's Installing and Removing

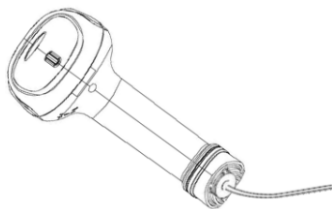 

Data cable connection:

1. The data cable on the bottom of the scanner is not allowed to be pulled out;
2. Because the data cable is integrated with the scanner interface, the data cable cannot be pulled out.

## 4.Packing List

- 1\* Scanner.
- 1\* Interface Cable.
- 1\* Quick Start Guide.

If you need to use the detailed manual, Please contact the bar code scanner vendor.

How to use the parameter barcode: scan corresponding bar codes to set up the scanner and the scanner will beep once.

## 5.System Setting

1. Reading the "Enable configuration code" barcode enables the barcode scanner to open and configure by reading a specific barcode (configuration code function). After the function is turned on, the parameters of the barcode scanner can be modified by reading one or more configure codes.
2. After reading the "Disable configuration code", most of the configuration code processing functions will be disabled by the barcode scanner. In this state, only the "Enable configuration code" code can be read and processed.



Enable Configuration Bar code



Disable configuration Bar code

## 6.Common settings

The content of the configuration code can be output. After reading the "output configuration code content" and setting it successfully, the content will be output to the host when reading the configuration code; after reading the "no output configuration code content" and setting successfully, the barcode scanner will no longer output the configuration code content. After the barcode scanner is restarted, no matter what the previous settings are, it will return to the state of "no output of configuration code content".



Transmit Configuration Bar Code Data



Do not Transmit Configuration Bar Code Data

## 7.Common Setting

Configuration Bar Code



Restore to Factory Default

Note: please use the "restore factory default" function carefully. After reading this configuration code, you will lose the current parameter setting and replace it with the factory default value.

## 8.User default settings

1. In addition to the factory default settings, you can save the settings you often use as user default settings.
2. Reading the "save current settings as user default settings" code will save all parameters of the barcode scanner as the user's default settings. If there is user default configuration information on the barcode scanner, the current configuration information will replace the original user default configuration information after this operation. Reading "restore to user default settings" switches the module to the state of user default settings. (Note: after restoring the factory default settings, the previously saved user default settings will not be lost.)



Save current settings as user default



Restore to user default

## 9.Interface setting



Serial port



HID-KBW



USB COM